THE SHARPER IMAGE®

Traveler's Personal Care Kit

DM940 Instructions

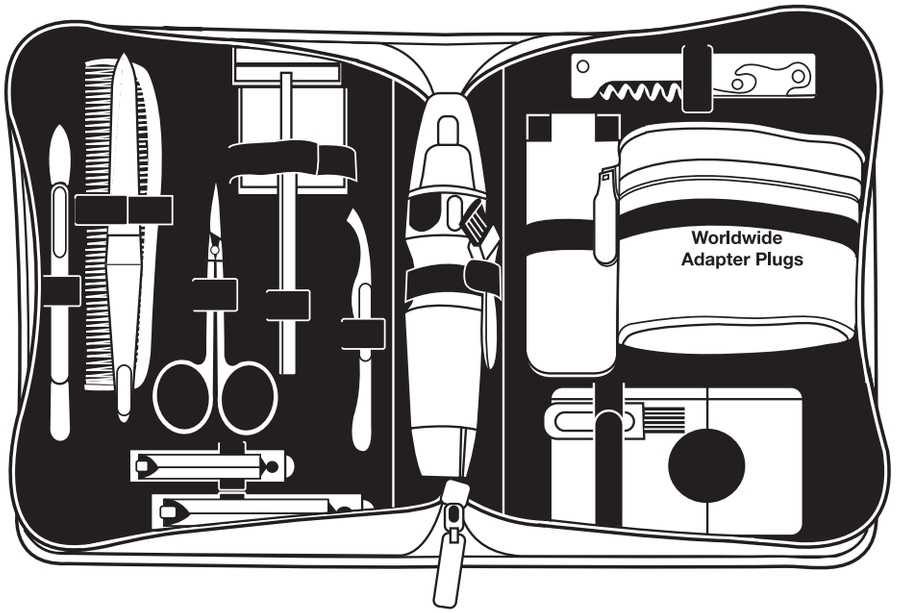

Read and save these instructions.

Dear Sharper Image Customer,

Thank you for your purchase of a Sharper Image product. We appreciate your business very much.

Please accept my personal assurance of your complete satisfaction with this product's quality and performance. We offer generous return privileges and excellent warranties on all our products.

For more than 25 years, The Sharper Image has shared the fun of discovering innovative products that make life easier and more enjoyable. We've been in business a long time because we are an exciting place to shop and — just as importantly — we strive to deliver great customer service that exceeds your expectations.

Enjoy your purchase!

Respectfully,

Richard

Richard Thalheimer
Founder, Chairman and Chief Executive Officer

Call 1-800-344-4444 for 24-7 ordering and customer service, or go to **www.sharperimage.com**, *our complete online store.*

IMPORTANT:

Please carefully read and save these instructions.

Electric Shaver

Note:

1. Keep shaver unit dry.
2. Do not immerse in water or clean shaver with water.
3. Keep cover on shaver to protect against damage.
4. Keep shaver out of sun and away from heat.

Installing the Battery:

1. Slide unit out of case.
2. Insert 2 AAA batteries.
3. Replace unit.

Using the Shaver:

1. Remove shaver cover.
2. Use shaver at right angle to skin, in the opposite direction of beard growth.
3. Switch off when finished shaving.

Electric Shaver

Cleaning the Shaver:

1. Be sure shaver is off.
2. Remove cover and blade.
3. Clean blade and hair chamber gently with included cleaning brush.

Groomer for Nose and Ear Hair

Installing the Battery:

1. Remove battery cover.
2. Install one AA alkaline battery, positive side up.
3. Replace battery cover.

Using the Groomer:

1. Slide switch to **ON** position.
2. Gently glide tip over area to be groomed.
3. Angle groomer upright for best results.

Groomer for Nose and Ear Hair

Periodic Cleaning:

1. Twist blade guard and remove from unit.
2. Gently remove hair and dirt from blade and blade guard with cleaning brush provided.

Worldwide Adapter Plugs

Please note that products manufactured in the U.S. will not work in most countries without first attaching a converter. (Converters not included.)

WARRANTY

What Is Covered

This warranty covers any defects in materials or workmanship, with the exceptions stated below.

How Long Coverage Lasts

This warranty runs for 90 days from the date of original purchase.

What Is Not Covered

This warranty does not cover damage caused by misuse or use other than as intended and described in the product instruction manual, or loss or damage to batteries or removable parts.

What The Sharper Image Will Do

The Sharper Image will repair any defects in materials or workmanship. In the event repair is not possible, The Sharper Image will either replace this product with one of similar features and price, or refund the full purchase price of the product, whichever you prefer.

How to Obtain Service

Return the product and receipt, along with a brief explanation of the problem, to:

T.S.I. - Returns Department
2901-A West 60th Street
Little Rock, AR 72209

If you have questions please feel free to contact our customer service representatives at 1-800-344-5555 or by email at care@sharperimage.com.

This warranty gives you specific legal rights, and you may have other legal rights that vary from state to state.

Sharper Image Corporation
650 Davis St., San Francisco, CA 94111
(415) 445-6000

Shop online: **www.sharperimage.com**

Due to continuing improvements, actual product may differ slightly from the product described herein.

V2 08/02